

Door Alignment — Front




All adjustments

1. Remove the door latch striker.

Horizontal and vertical adjustment


2. Loosen the front door hinge-to-front door bolts.

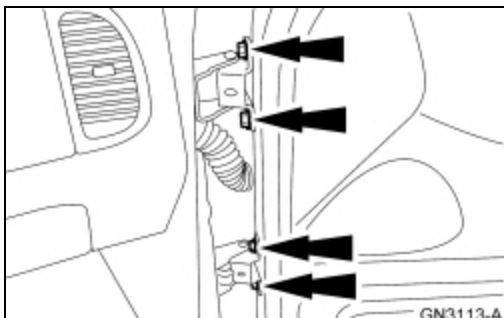

3. Adjust the front door. For additional information, refer to the dimensions in Section 501-35.
4. Tighten the front door hinge-to-front door bolts to 30 Nm (22 lb-ft).

Fore and aft adjustment

5. Remove the front fender. For additional information, refer to Section 501-02.
6. Loosen the door hinge-to-body bolts.

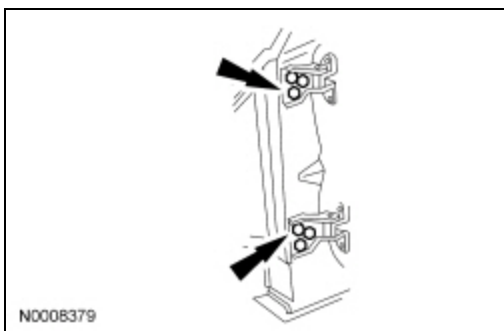

7. Adjust the front door. For additional information, refer to the dimensions in Section 501-35.
8. Tighten the front door hinge-to-body bolts to 30 Nm (22 lb-ft).
9. Install the front fender. For additional information, refer to Section 501-02.

All adjustments

10. Install the front door latch striker.
 - Tighten to 25 Nm (18 lb-ft).