


Door Trim Panel — Rear, SuperCrew



NOTE: LH side shown, RH side similar.

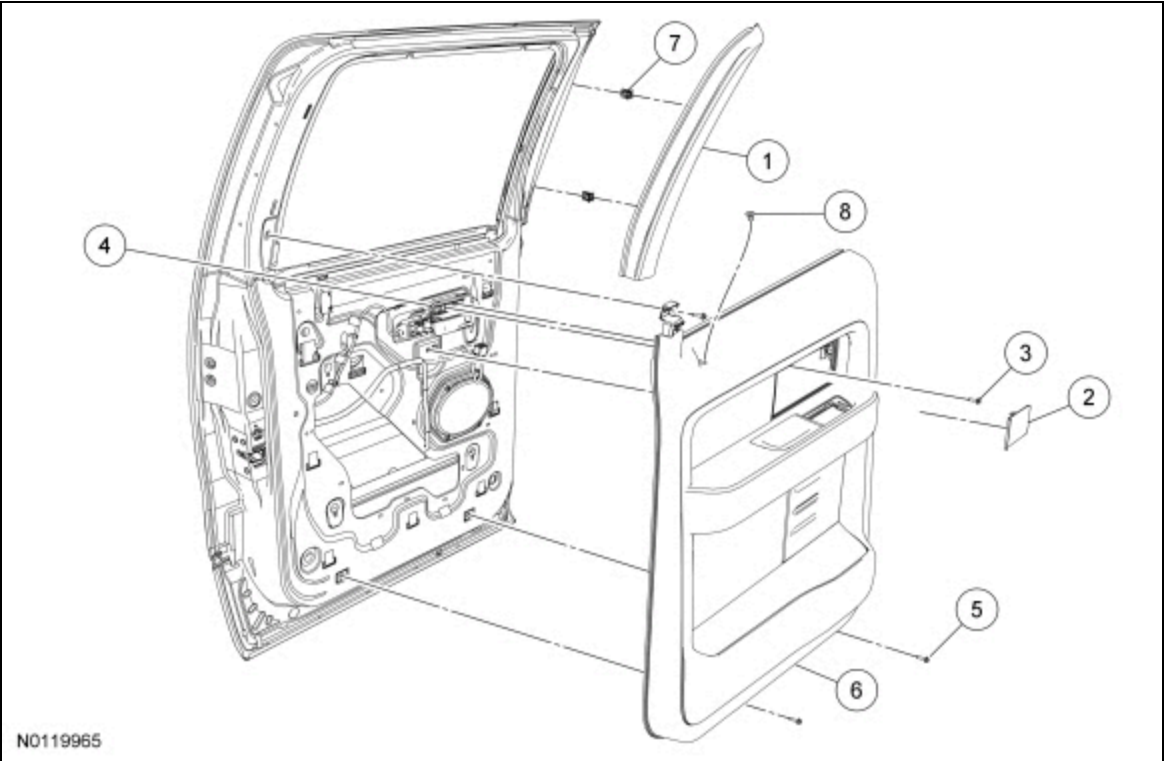

Item	Part Number	Description
1	2550425504 RH/ 25505 LH RH/ 25505 LH	Rear door garnish moulding
2	3145831458	Rear door handle cover plate
3	W714017W714017	Rear door handle screw
4	2646026460 RH/ 26461 LH RH/ 26461 LH	Rear door handle
5	W502661W502661	Rear door trim panel screw (3 required)
6	2740627406 RH/ 27407 LH RH/ 27407 LH	Rear door trim panel
7	—	Rear door garnish moulding clip (part of 25504 RH/ 25505 LH) (2 required)
8	2199921999	Door lock button bezel

Removal and Installation

1. Remove the rear door garnish moulding.
 - Pull outward to release the rear door garnish moulding clips from the door.
2. Remove the window control switch panel. For additional information, refer to Section 501-11.

3. Remove the rear door handle cover plate.
4. Remove the rear door handle screw.
5. Remove the 3 rear door trim panel screws.
6. **NOTICE: Do not pull directly outward on the rear door trim panel. Damage may occur.**

Remove the rear door trim panel.

- Lift upward to remove the rear door trim panel and position aside.
- Disconnect the interior handle activating cable from the interior door handle and remove the rear door trim panel.

7. To install, reverse the removal procedure.