


Seat Latch Striker — Rear, Crew Cab



NOTE: 40 percent shown, 60 percent similar.

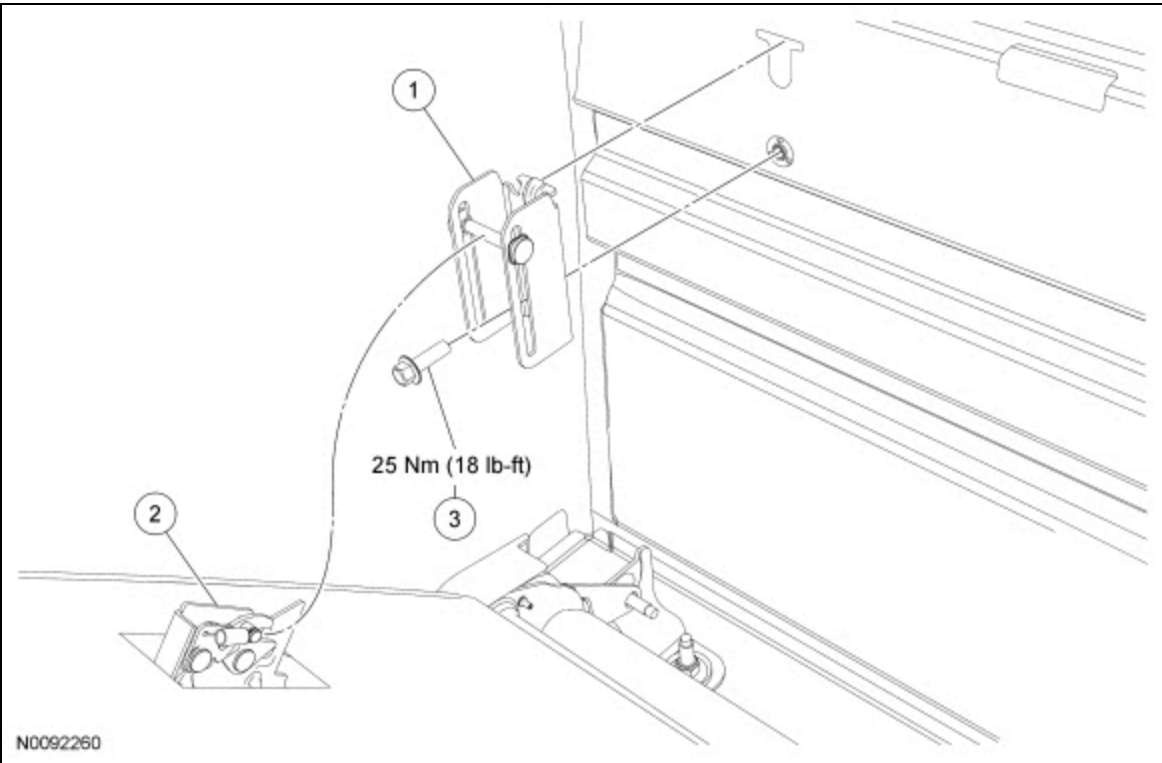


Item	Part Number	Description
1	62452 62452	Striker
2	61383 61383	Backrest latch
3	W505284 W505284	Striker bolt

Removal and Installation

1. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.

- Release the backrest latch.
- From behind the backrest, pull up on the latch release and pull the backrest forward.
 - Release the cushion latch and lower the cushion and backrest.
 - To install, slide the striker pin up/down and align to the backrest latch.

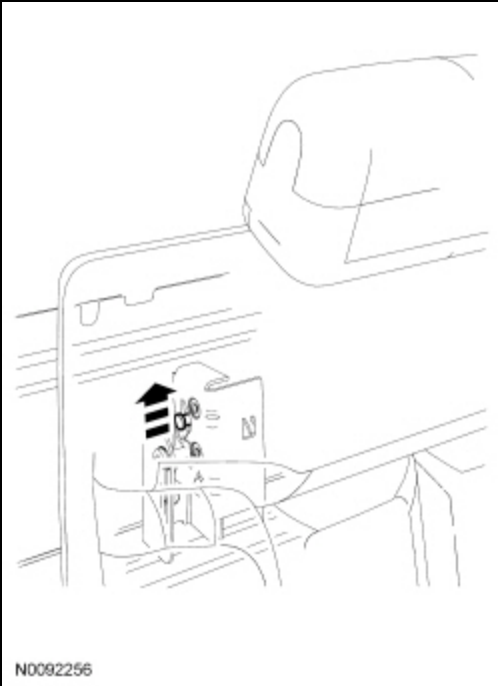

2. Remove the bolt and striker.
 - To install, tighten to 25 Nm (18 lb-ft).
3. To install, reverse the removal procedure.
 - Make sure the backrest is fully latched when completed.