


Pickup Bed Side Step Latch

 [Ford Ecat Electronic Parts Catalog](#)

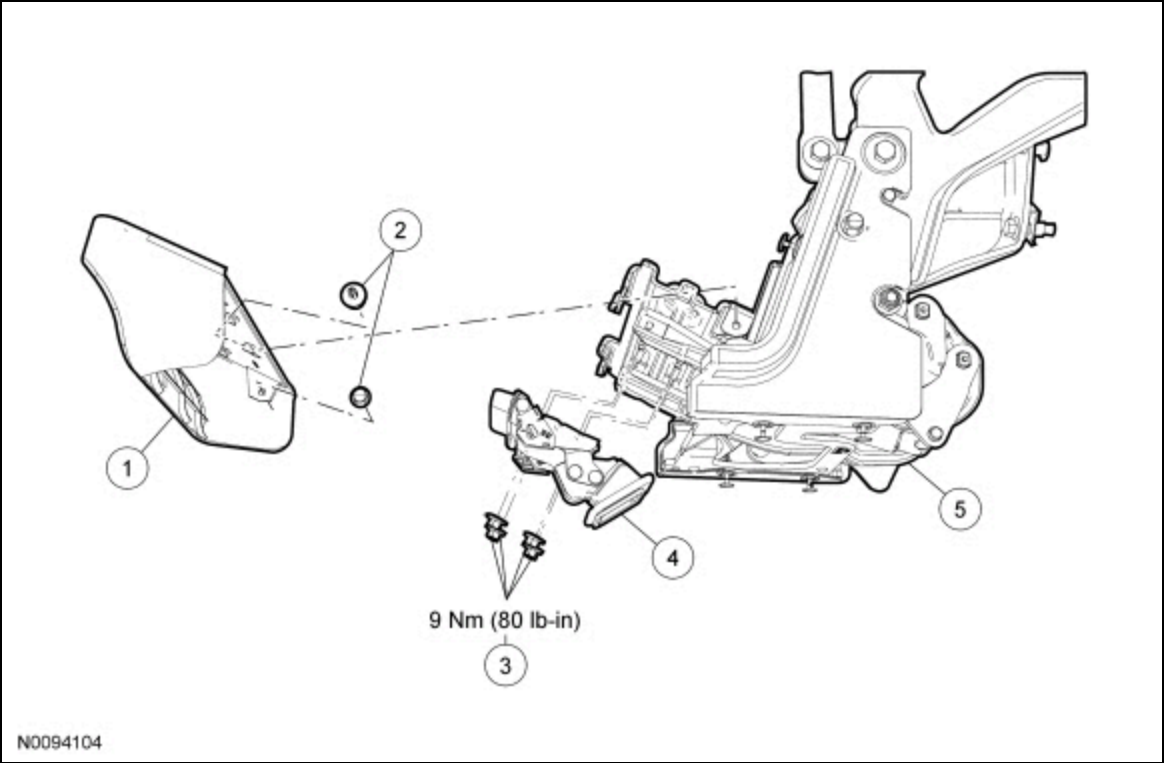

Item	Part Number	Description
1	1520044 1520044	Step cover
2	W505153 W505153	Step cover screws (2 required)
3	—	Step latch nuts (4 required)
4	1516516 1516516	Step latch
5	—	Step assembly

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Open the step to the full extended position.
3. Remove the 2 step cover screws.
4. Slide the step cover off the step.
5. Remove the 4 latch nuts and the latch.
 - To install, tighten to 9 Nm (80 lb-in).
6. To install, reverse the removal procedure.