


Brake Pedal Control Switch



NOTE: *Steering wheel removed for clarity.*

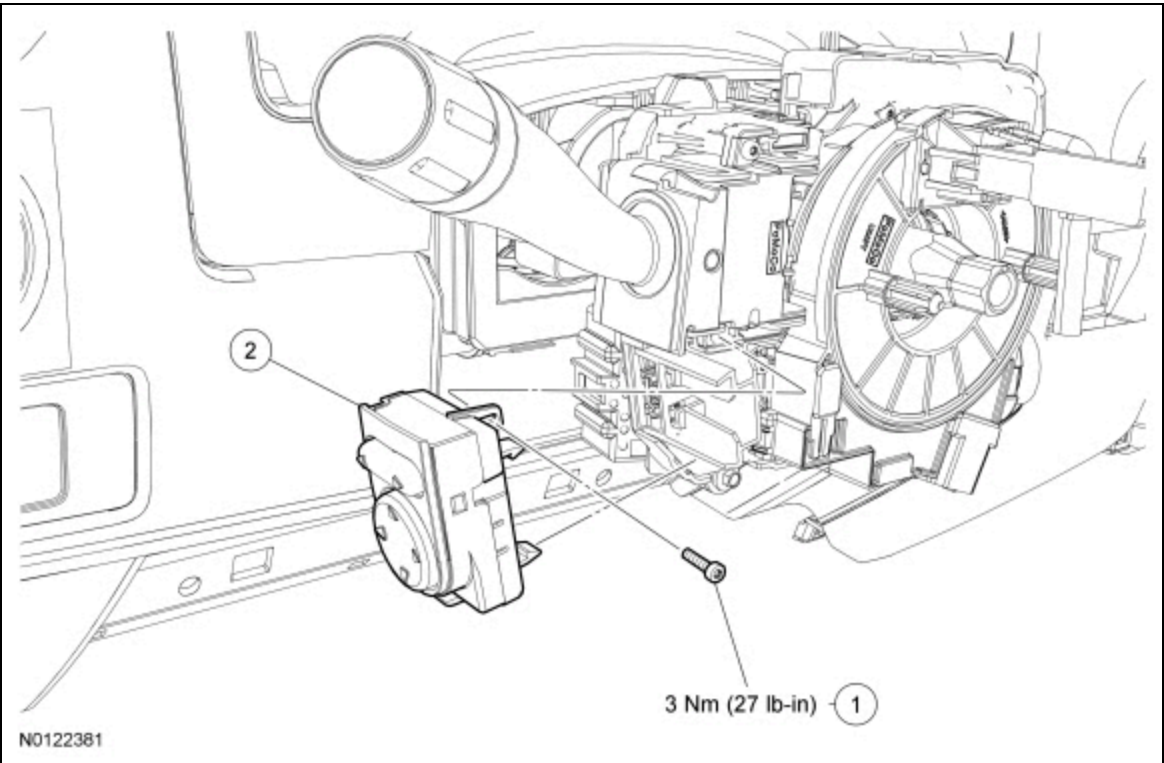

Item	Part Number	Description
1	W715057 W715057	Screw
2	9G604 9G604	Brake pedal control switch

Removal and Installation

NOTE: *Turn the steering wheel 90 degrees to the left to access the brake pedal control switch screws.*

1. Remove the steering column shrouds. For additional information, refer to Section 211-04.
2. Remove the screw.
 - To install, tighten to 3 Nm (27 lb-in).
3. Using a suitable tool (such as a pocket screwdriver), carefully disengage the control switch locking tabs one at a time, then remove the switch.
4. To install, reverse the removal procedure.