


Steering Column Multifunction Switch



NOTE: Steering wheel removed for clarity.

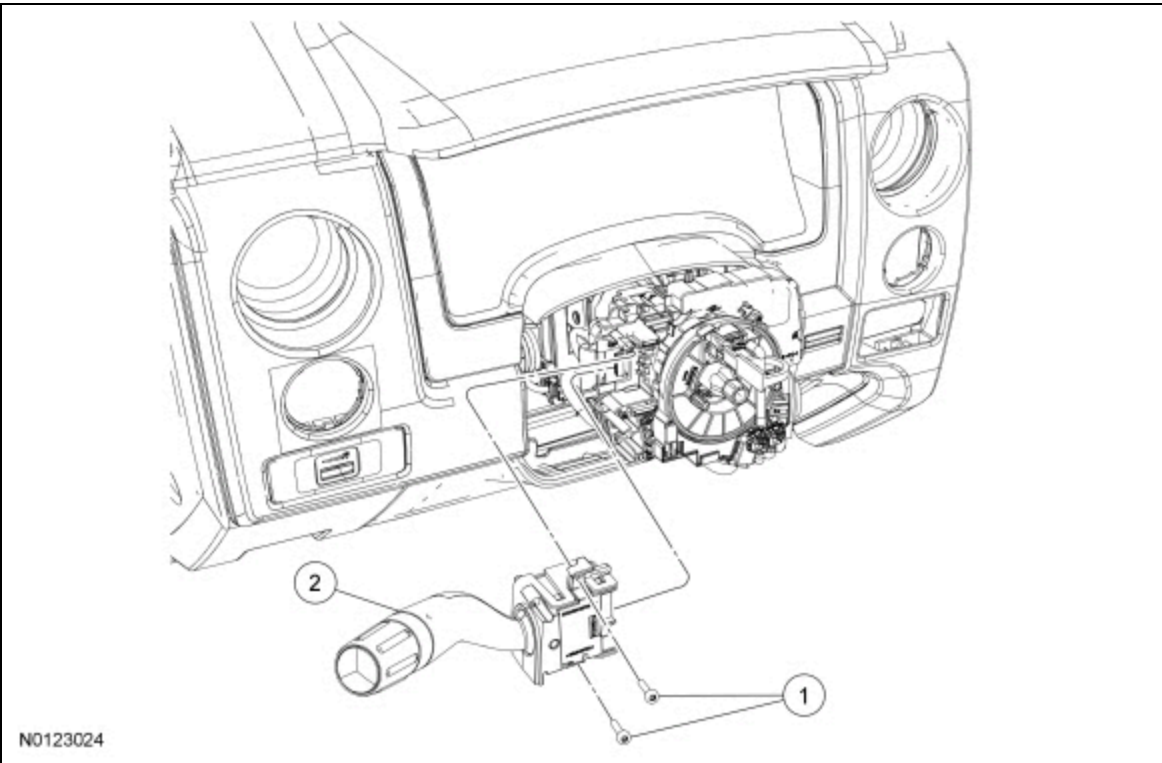

Item	Part Number	Description
1	W705132 W705132	Multifunction switch screws (2 required)
2	13K359 13K359	Multifunction switch

Removal and Installation

1. Remove the steering column shrouds. For additional information, refer to Section 211-04.
2. If equipped, remove the steering column control switch. For additional information, refer to Steering Column Control Switch in this section.
3. Turn the steering wheel 90 degrees to the left and remove the 2 screws and the multifunction switch.
 - To install, tighten to 2 Nm (18 lb-in).
4. To install, reverse the removal procedure.